

direction of equipment movement due to equipment operation

tel: 416-291-7371 1-800-565-8401 fax: 416-291-8049 1-888-811-2264

backing plates as required to match

of equipment/duct wall (by others)

angle brackets installed on other side

equipment

web: www.vibro-acoustics.com eml: info@vibro-acoustics.com

spring isolator with

color-coded spring

stop washer

angle brackets

(b)

duct

(b)

(a)



File No.: INS-AHCS-001 Supersedes: New

Date: 25 Nov 2010 Date: New **AHCS**

INSTRUCTIONS

- 1. Ensure that the bracket mounting locations are structurally sound for the installation of these thrust restraints.
- Pair of thrust restraints at height shown on submittal drawings, using color-coded springs for identification.
- 3. On unit start-up, check to ensure that the 1/4'' (6 mm) operating clearance is present. If clearance is insufficient, turn adjustment nut counterclockwise until the clearance is correct. If clearance is greater than 1/4'' (6 mm) then adjust nut should be turned clockwise until clearance is correct. Adjust snubbers equally on both sides of unit.

(a) 15" (381 mm) long threaded rod(b) Full hex nuts (6 per isolator)(c) USS washer (5 per isolator)

rod Ø

PLAN VIEW DETAIL

